 


AX-WF185 OPERATING INSTRUCTION


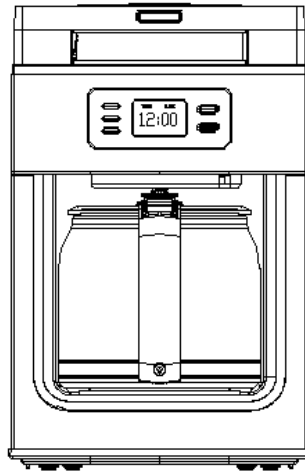


Important Safeguards:

1. Please read these instructions carefully before using the appliance.
2. Check that your mains voltage corresponds to that stated on the appliance.
3. Never leave the appliance unsupervised when in use. Keep out of reach of children or incompetent persons.
4. Only use the appliance for domestic purposes and in the way indicated in these instructions.
5. Never use the appliance near hot surfaces.
6. Unplug unit from outlet when not in and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
7. Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions, or has been damaged in any manner, return appliance to the nearest authorized service facility for examination, repair or adjustment.
8. Never use the appliance outside and always place it in a dry environment.
9. Never use accessories which are not recommended by the producer. They could constitute a danger to the user and risk to damage the appliance.
10. Never move the appliance by pulling the cord. Make sure the cord cannot get caught in any way. Do not wind the cord around the appliance and do not bend it.
11. Stand the appliance on a table or flat surface.
12. Only use fresh (potable) and cold (moderate) water. Do not use water contained in bathtubs, washbasins or other recipients.
13. Make sure the cord never comes into contact with the hot parts of the appliance.
14. Never touch the hot parts of the appliance (be careful, also the warming plate is a hot part!), only touch the plastic parts and jug by the handle.
15. Be careful not to get burned by the steam evaporating from the coffee filter.
16. Never use the appliance if the jug shows any signs of cracks. Only use the jug with this appliance. Handle with care as the glass is very fragile.
17. Never use your coffee machine without water in it. If you have a programmable coffee machine, make sure to fill it with water before programming it.
18. Never place the empty (or almost empty) coffee pot on the hotplate when the coffee machine is running, or on any other hot surfaces.
19. Always attach plug to appliance first, then plug cord into wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
20. Do not use coffee machine with a damaged outlet.
21. Do not forget that temperature of the coffee prepared is high. Handle with care your coffee pot to avoid any risk of splashes.

22. Any examination, repair, or adjustment for the appliance should be made by the authorized service agent.
23. Save this instruction for future use.
24. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
25. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
26. Children should be supervised to ensure that they do not play with the appliance
27. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
28. The appliance must not be immersed to water or any other liquids.
29. The appliance is intended to be used in household and similar applications such as:
 - staff kitchen areas in shops, offices and other working environments;
 - farm houses;
 - by clients in hotels, motels and other residential type environments;
 - bed and breakfast type environments.

Operation:

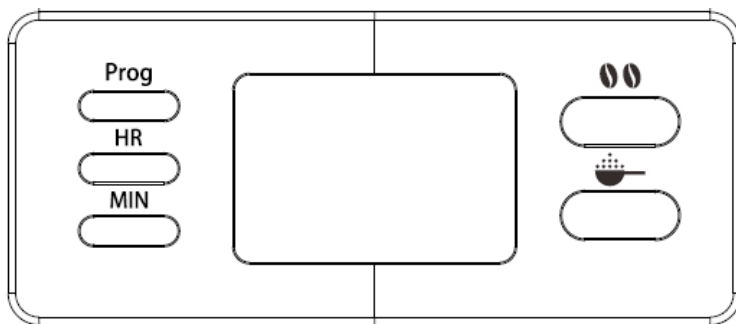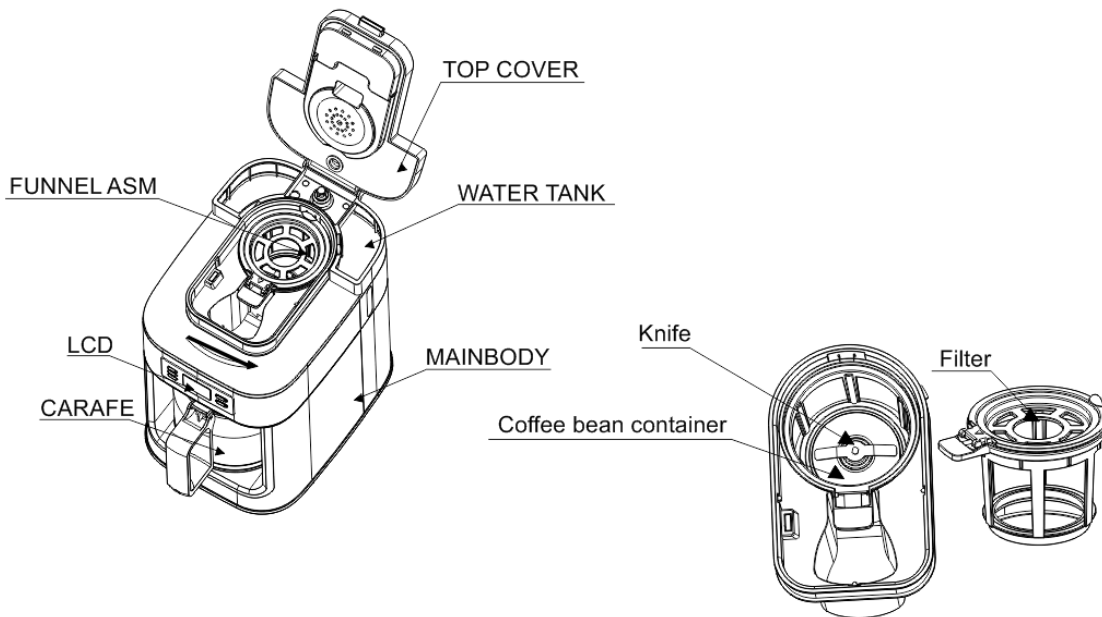

A. How to brew coffee with coffee bean:

1. Plug in power, then uncover the top cover and fill clean water to required level into the water tank.

Note: Do not fill in water that exceeds the "MAX" level.

2. Fill adequate coffee bean into the coffee bean container, than close the top cover.

Note: The max capacity of the container is about 60g. Do not fill in coffee bean that exceeds the "MAX" level.

3. Press the grinding button for one time to grind coffee beans into powder. After grinding, the coffee maker will brew coffee with the powder automatically.

Note: It takes about 25s to grind the coffee bean.

4. After brewing, the machine will keep the coffee warm for about 30minutes.

B. How to set up the time to brew coffee with coffee bean:

1. Plug in power, then uncover the top cover and fill clean water to required level into the water tank.

2. Fill adequate coffee bean into the coffee bean container, than close the top cover.

Note: The max capacity of the container is about 60g. Do not fill in coffee bean that exceeds the "MAX" level.

3. Press the grinding button continuously for two times, the button indicator light will start flashing.

4. Then press "Prog" button one time, the LED displays "CLOCK" at the top right corner, that shows the current time. You can set the current by pressing the "HR" and "MIN" button.

5. After setting current time, press the "Prog" button one time, the LED displays "TIMER" at the top left corner, then press "HR" and "MIN" button to set the appointment time.

6. After finishing setting the time, press "Prog" button for one time. The grinding button will keeps flashing. When the time you set has arrived, the machine will start to grind the coffee bean and brew coffee automatically.

C. How to brew coffee with coffee powder:

1. Plug in power, then uncover the top cover and fill clean water to required level into the water tank.

Note: Do not fill in water that exceeds the "MAX" level.

2. Fill adequate coffee powder into the coffee bean container, than close the top cover.

Note: The max capacity of the container is about 60g. Do not fill in coffee powder that exceeds the "MAX" level.

Press the coffee button for one time, the coffee button indicator light will keeps on and start brewing coffee.

3. After brewing, the machine will keep the coffee warm for about 30minutes.

D. How to set up the time to brew coffee with coffee powder:

1. Plug in power, then uncover the top cover and fill clean water to required level into the water tank.

2. Fill adequate coffee powder into the coffee bean container, than close the top cover.

Note: The max capacity of the container is about 60g. Do not fill in coffee powder that exceeds the “MAX” level.

3. Press the coffee button continuously for two times, the button indicator light will start flashing.

4. Then press “Prog” button one time, the LED displays “CLOCK” at top right corner, that shows the current time. You can set the current by pressing the “HR” and ‘MIN” button.

5. After setting current time, press the “Prog” button one time, the LED displays “TIMER”, then press “HR” and “MIN” button to set the appointment time.

6. After finishing setting the time, press “Prog” button for one time. The coffee button indicator light will keeps flashing. When the time you set has arrived, the machine will start to brew coffee automatically.

Warning: Do not open the top cover when the coffee machine is under running status. If you open the top cover during working process, the machine will automatically stop working. If you want to continue to use, please operate according to the corresponding instructions.

Technical information:

Input voltage: 220-240VAC~50Hz

Power: 1000W

Volume: 1.2L

Notes:

1. The coffee maker will be switched off automatically if brewing exceed 40 minutes.

Cleaning:

1. Do not forget to remove the plug from the socket before cleaning the appliance.

2. Wipe outside with soft dry cloth when coffee machine is wet, never use metal polish.

3. The removable items should be washed in hot soapy water. Rinse them before fixing.

4. Wash the filter and carafe.

5. Never use dishwasher to clean the jug.



This product must not be disposed together with the domestic waste. This product has to be disposed at an authorized place for recycling of electrical and electronic appliances.

By collecting and recycling waste, you help save natural resources, and make sure the product is disposed in an environmental friendly and healthy way.

SAVE THESE INSTRUCTIONS

The appliance is not to be used by children or person with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction

-children being supervised not to play with the appliance

-staff kitchen areas in shops, offices and other working environments

-farm houses

-by clients in hotels, motels and other residential type environments

-bed and breakfast type environments

-If the supply cord is damaged, it must be replaced by the manufacture, its service agent or similarly qualified persons in order to avoid a hazard

ADD device:


1.1 Download smart life app



Please scan the QR code,or get smart life to download on APP store or Google play.

1.2 Registration

Enter the register/login interface,input the phone number for getting verification code to register or through other methods at the bottom of page connecting to related authorization interface to log in.

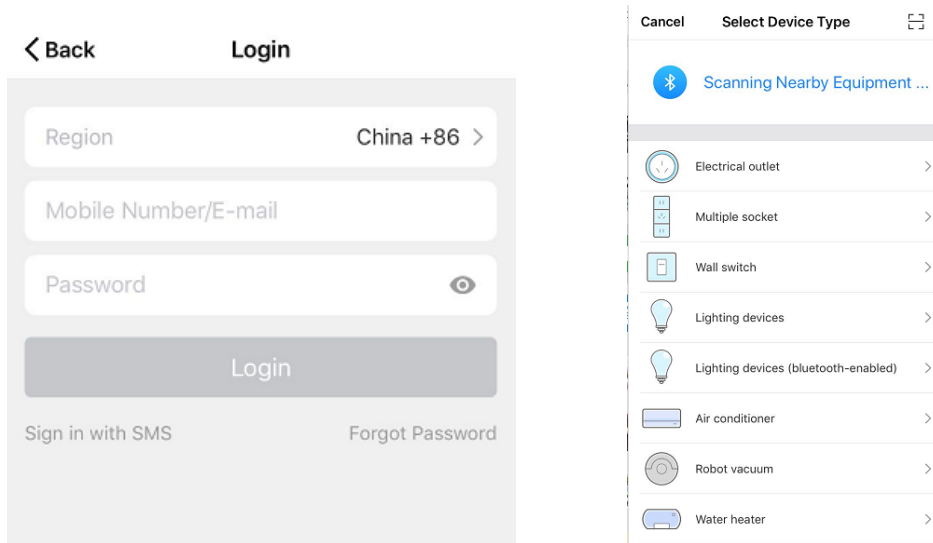

1.3 Easy Mode(Recommend)

Preparation:Device has connected with electricity,long press “pro“button for 5 seconds until indicator light quickly flashes,the application already stepped into”My Device“interface.



Phone has connect to wifi router and been able to conneced to internet.

Tap the icon”+“on the top right corner of “My Device”,choose your device type,enter into “Add Device”.

Make sure the indicator light is flashing quickly,then tap the related button in application.



Choose the local wifi and enter the correct password,tap”Next”.

 Wait for configuring successful,then tap”Complete”.

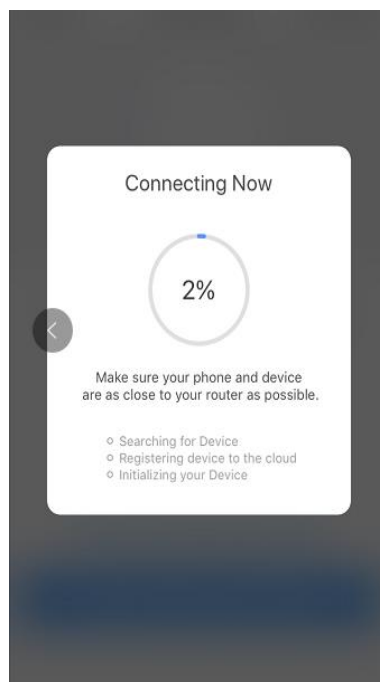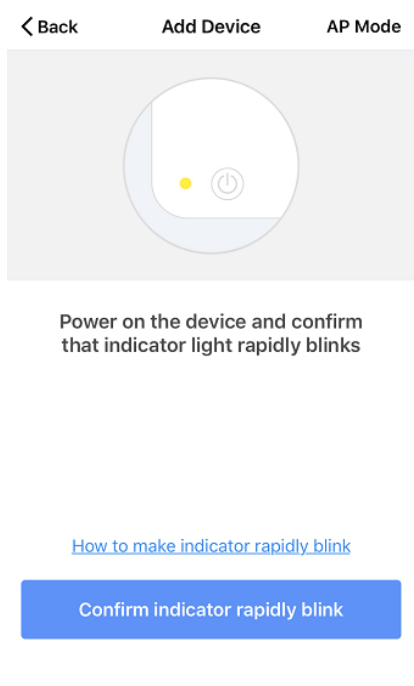


Enable Smart life skill in Alexa APP

 
2.1 Open Alexa (amazon account), choose 'Skills' in the options bar, and then search "Smart life" in the input box.

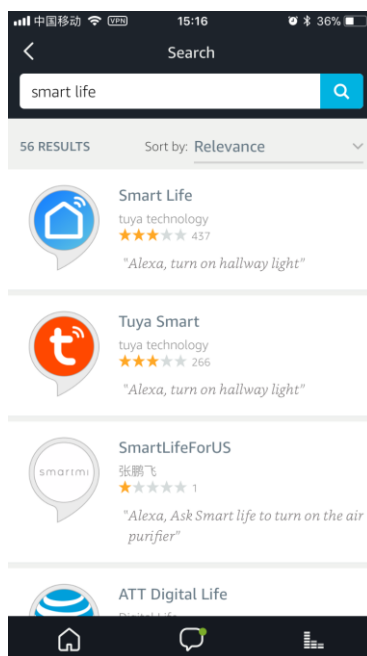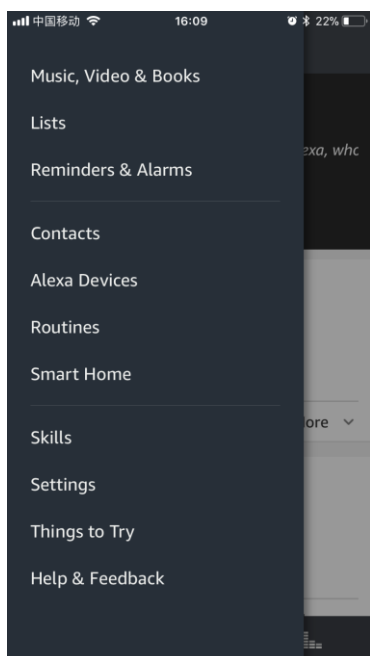


2.2 Select Smart life in the search results, and then click "Enable Skill".

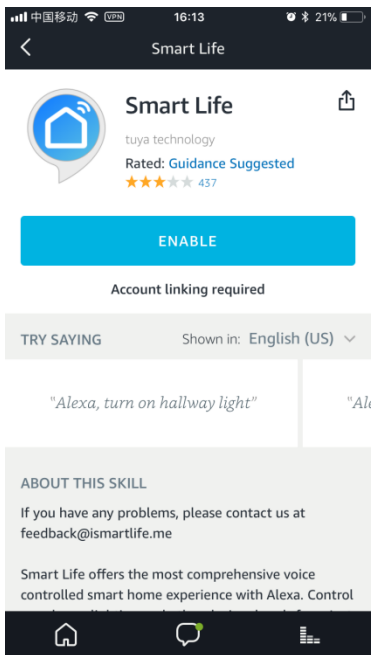

 2.3 Then input the user name and password of smart life APP that you had previously registered.

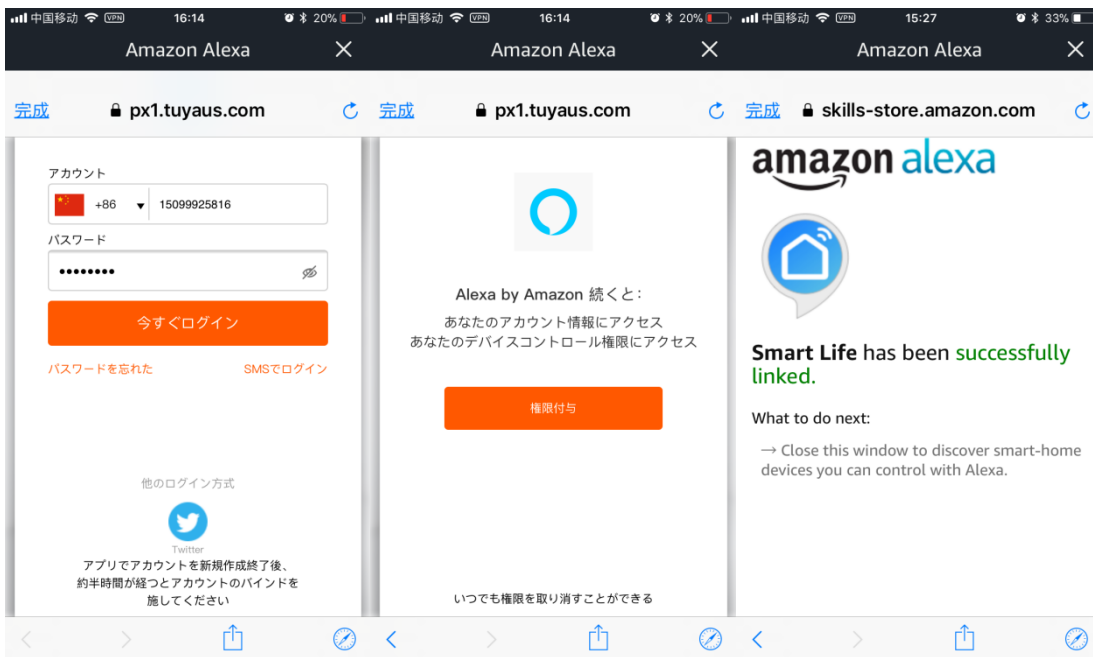

 2.4 Go back to Alexa home page, choose 'smart home' in the option bar, press '+'(add device) button, searching devices related to applications automatically

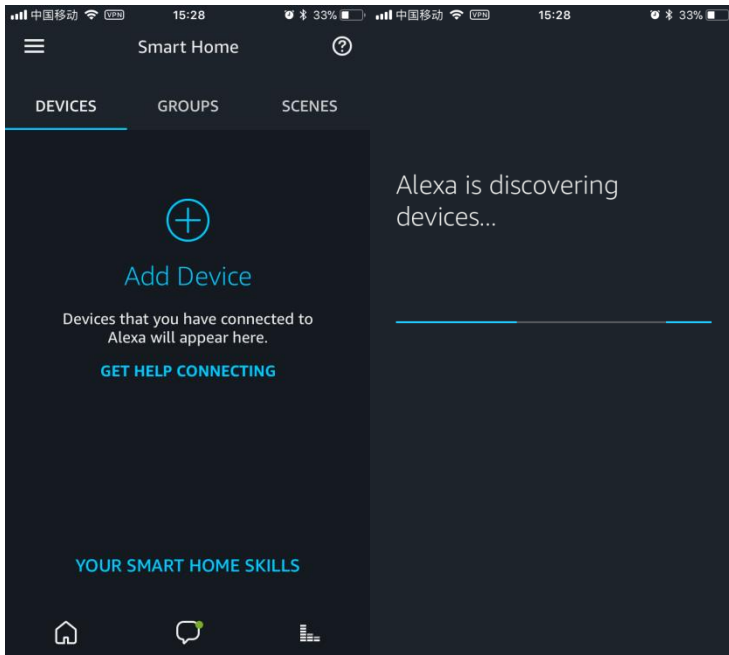

2.5 After the above operation is successful, you can control the device Via Alexa.